



# How to Transfer Wells

## Export

1. Go to Well menu, click on “Export...”, a window showing all existing wells will pop up. Select the well(s) you want to transfer and click on the “Save” button at the right bottom corner. User can save multiple wells to one data file.

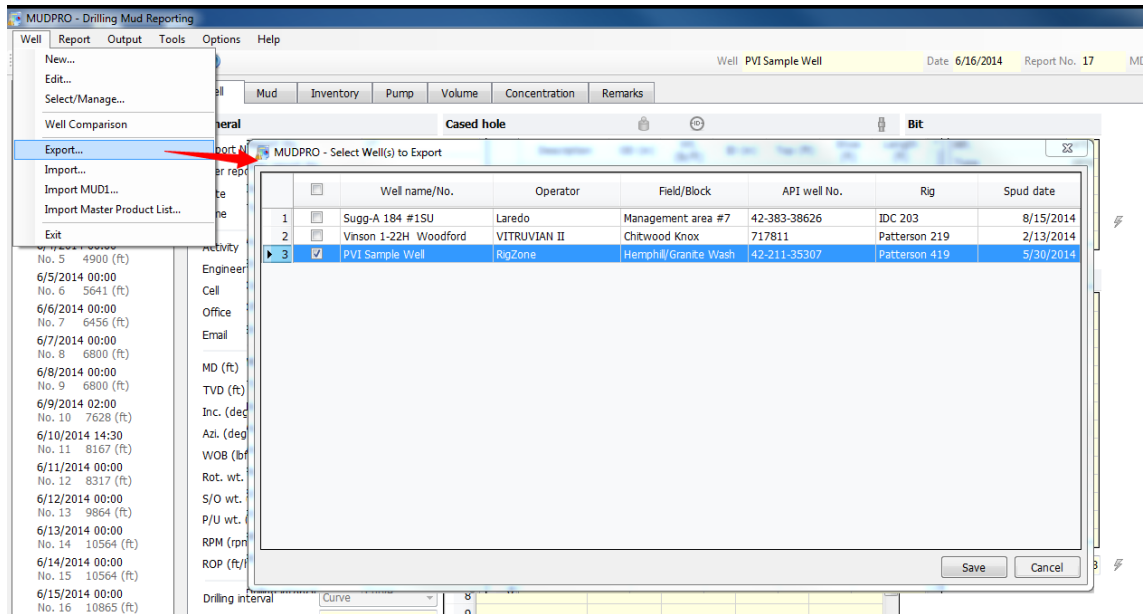


2. In “Save As” window, you can rename the well file and click on “Save” button to save it to a desired path.

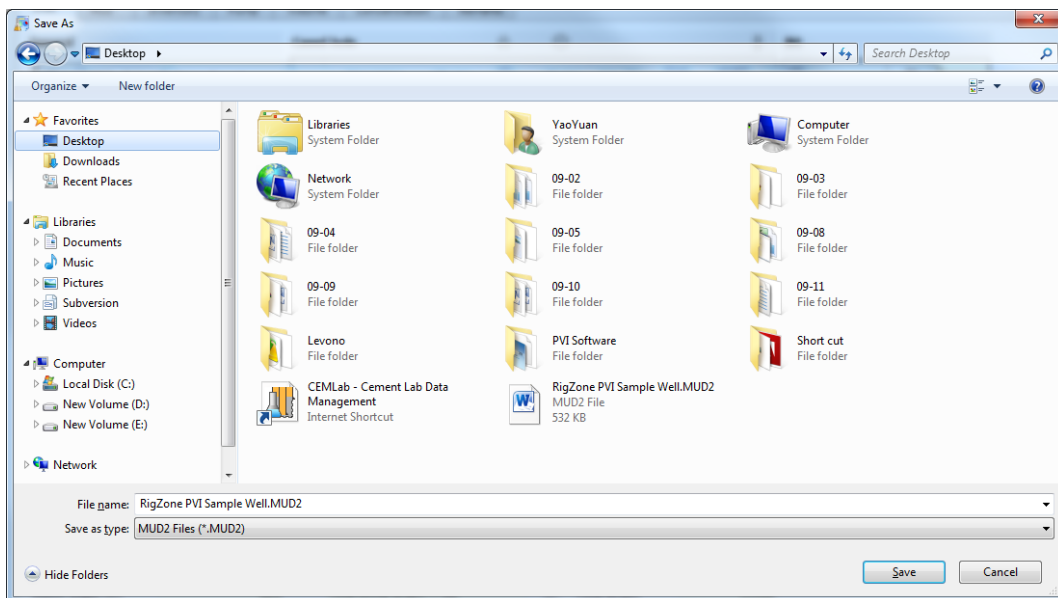

3. The size of generated data file is always hundreds KB. Users can save it to flash drive or send it via email.

## Import

4. To import a well file, go to Well menu, and click on “Import...” , then in Open window, select the well file you want to import, and click on “Open” button.

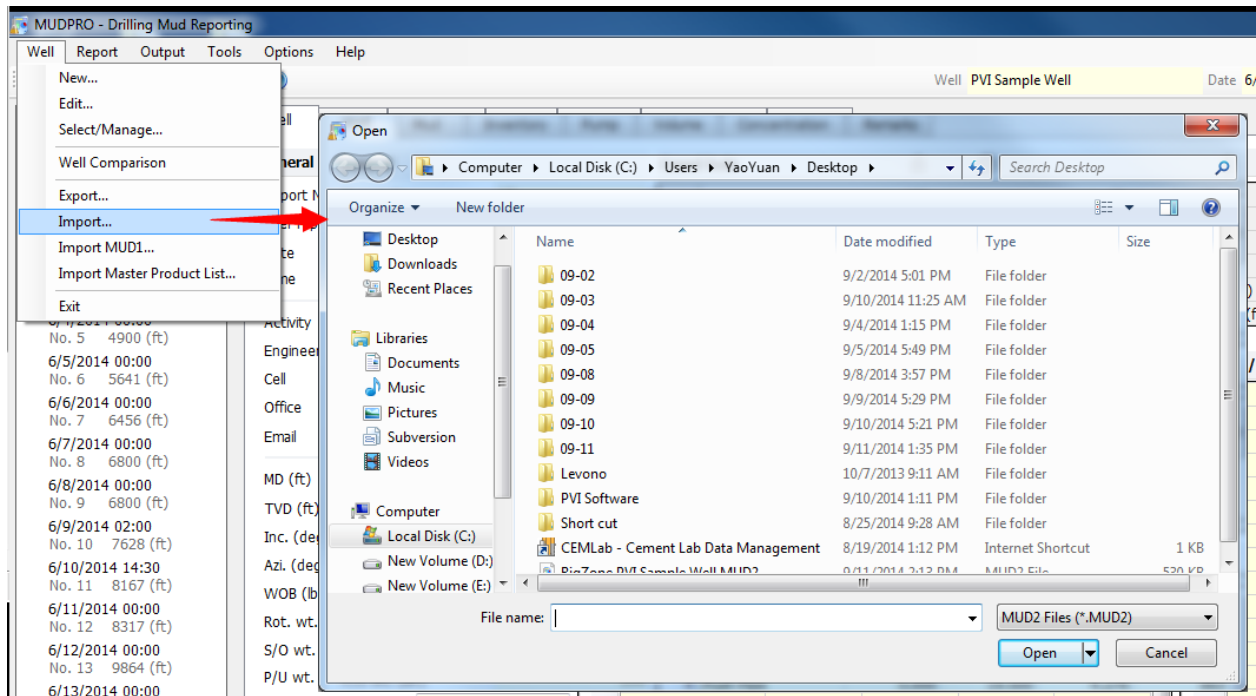

5. If the well you want to import already exists in your MUDPRO, then you will get a window like below.
  - a. If you want to overwrite the existing well with the imported well, then select “Overwrite” option.
  - b. If you want to save the imported well as a new well, then select “Rename” and type in a name for this well. \*Please note that you can’t have 2 wells with a same name in MUDPRO.

Then click on “OK” button, MUDPRO will load the well and display its reports on interface.

